






Quick Start Guide

SIH-3/3.6/4/5/6kW-SH

Additionally required wires


No.	Required Materials	Type	Cross-section
1	DC cable 	Outdoor multi-core copper wire cable complying with 600V and 16A standard.	4-6mm²
2	Grounding cable 	Outdoor single-core copper wire cable. Conventional yellow and green wire	6mm ² , the same as that of the PE wire in the AC cable.
3	Inverter Grid cable	Outdoor 3-core copper wire cable	6-16mm² (Recommend 10 mm ²)
4	EPS Loads cable	Outdoor 3-core copper wire cable	6-10mm² (Recommend 6 mm ²)
5	AC charger cable	Outdoor 3-core copper wire cable	6-10mm² (Recommend 6 mm ²)
6	NORMAL loads cable	Outdoor 3-core copper wire cable	6-16mm² (Recommend 10 mm ²)
7	Grid cable	Outdoor 3-core copper wire cable	6-16mm² (Recommend 10 mm ²)
8	Smart meter power cable		0.5-1.5mm²
9	Communication cable 	CAT 5E outdoor, shielded network cable	0.08-0.2mm²

Note:

In case local regulations impose specific requirements for cables, follow the cable specifications mandated by those regulations.

Cable selection should take into consideration factors such as rated current, cable type, routing method, ambient temperature, and maximum expected line loss.


Backup Wiring Diagram (For AU / NZ / SA)

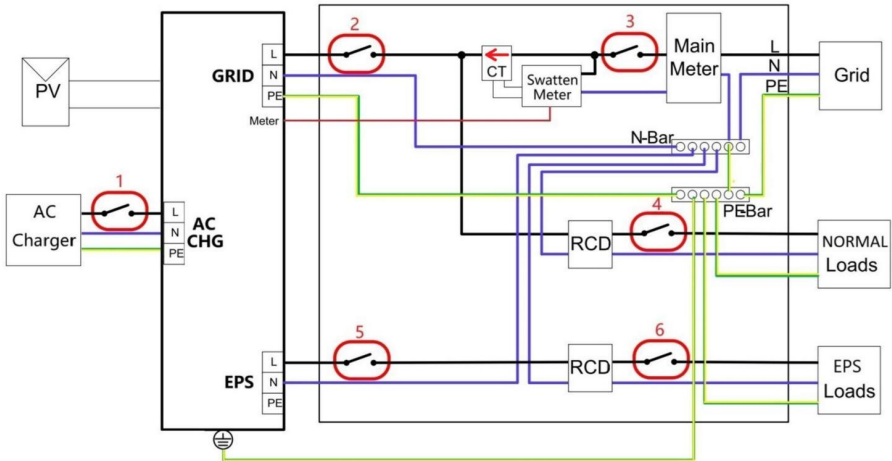

Note:

1. The PE wire of EPS terminal is not required for Australia, New Zealand and South Africa.
- 1-6: AC breaker, refer to Electrical Connection Overview.
3. All the AC breakers and RCD must comply with local regulation.
4. As shown in the above figure, the arrow on the CT must point to the load side.


Backup Wiring Diagram (For Other Countries)

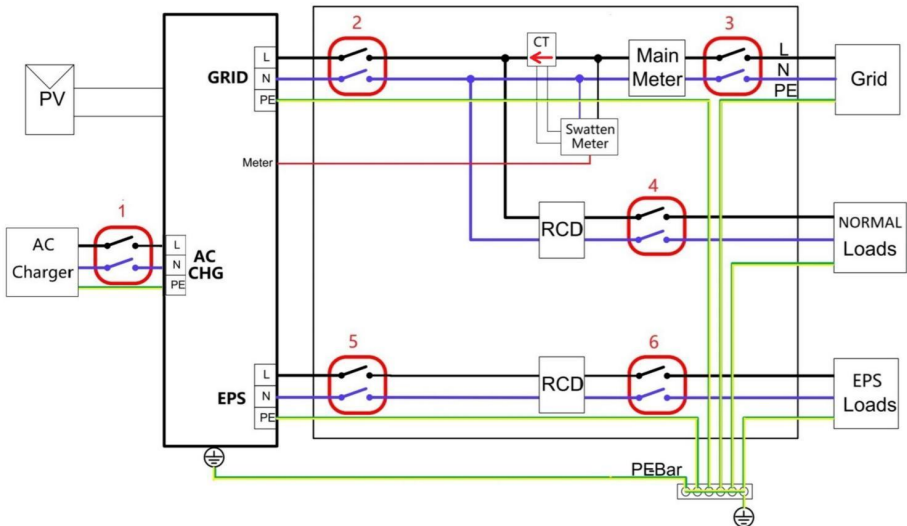

Note:

1. 1-6: AC breaker, refer to Electrical Connection Overview.
2. All the AC breakers and RCD must comply with local regulation.
3. As shown in the above figure, the arrow on the CT must point to the load side.

Backup Wiring Diagram (For TT System)

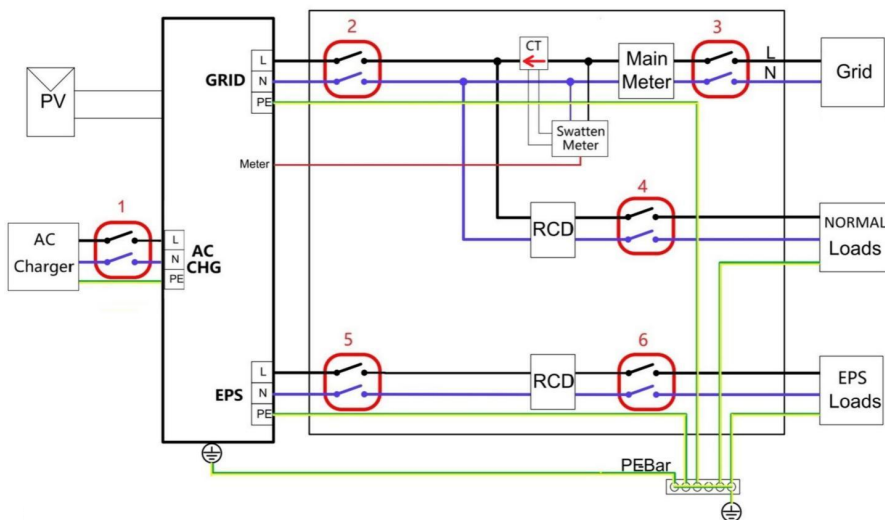

Note:

- 1-6: AC breaker, refer to Electrical Connection Overview.
- All the AC breakers and RCD must comply with local regulation.
- As shown in the above figure, the arrow on the CT must point to the load side.

Notice

- The contents may be updated or revised periodically due to product development. The information within this guide is subject to change without prior notification. In no circumstances can this guide replace the user manual or associated notes of the device.
- Before installing the equipment, ensure that you carefully read, thoroughly understand, and strictly abide by the detailed instructions in the user manual and other relevant regulations. The user manual can be downloaded by accessing the website at www.swatten.com, or it can be acquired by scanning the QR code on the back cover of this guide.
- All operations must be carried out solely by qualified personnel. These personnel must have received training in the installation and commissioning of electrical systems, be capable of handling potential hazards, and possess knowledge of the manual as well as local regulations and directives.
- Before commencing installation, check that the items in the package are intact and complete in comparison with the packing list. In case of any damaged or missing components, contact Swatten or the distributor immediately.
- The cable used must be in good condition and well insulated. Operating personnel must wear appropriate personal protective equipment (PPE) at all times.
- Any violation may lead to personal injury, death, or damage to the device, and will invalidate the warranty.

Safety




















The inverter has been designed and tested in strict accordance with international safety regulations. Read all safety instructions attentively before starting any work and adhere to them constantly when working on or with the inverter. Incorrect operation or work may cause:

- Injury or death to the operator or a third party;
- Damage to the inverter or other properties.

Please comply with the safety instructions related to the PV strings and the utility grid.


Installation Tool Requirements

The following tools are recommended when installing the equipment. Use other auxiliary tools on site if necessary.

 Goggles	 Safety shoes	 Safety gloves	 Dust mask	 RJ45 crimping tool
 Diagonal pliers	 Wire stripper	 Hammer drill	 Heat gun	 DC terminal crimping tool
 Marker	 Level	 Heat shrink tube	 Rubber hammer	 DC wiring wrench
 Multimeter	 Cable tie	 Torque wrench	 Vacuum cleaner	

Installation

Appearance

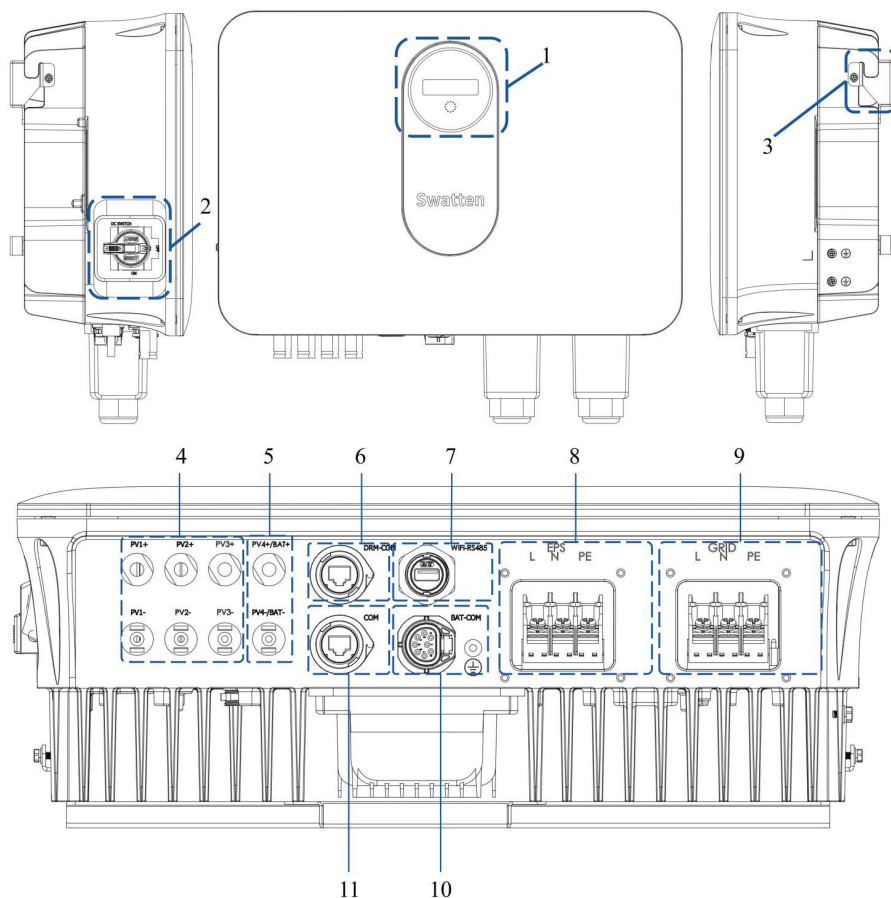

- | | | |
|------------------------|--------------------|------------|
| 1. LED indicator panel | 2. DC switch | 3. Hanger |
| 4. PV terminals* | 5. BAT terminals** | 6. DRM-COM |
| 7. WIFI | 8. BACK UP*** | 9. GRID |
| 10. BAT-COM | 11. COM | |

* Standard configuration includes PV1 and PV2; PV3 is optional. PV1 is one MPPT, PV2&PV3 share one MPPT.

** PV4 is unavailable here.

** Equivalent to the use of EPS.


Installation

Deliverables


1. Inspect the outer packing box for damage, such as holes, cracks, deformation, and others signs of that might indicate equipment damage. If any damage is identified, do not unpack the package and contact the supplier.
2. Verify the inverter model. If the model does not match your order, do not unpack the product and contact the supplier promptly.



A

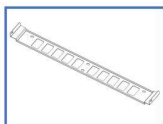

B

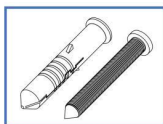


C




D



E

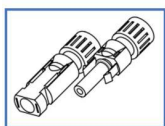

F

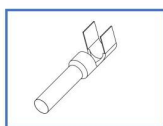


G




H




I

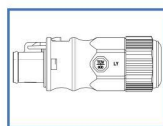


J

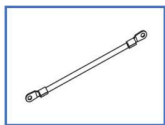

K

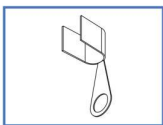

L

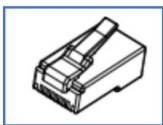

M



N

Item	Name	Quantity
A	Inverter	1
B	Wall-Mounting Bracket*	1
C	Expansion Plug Set	4
D	Smart Energy Meter with 2CTs	1
E	M5 Screws and Washers	3
F	MC4 Connectors**	3~4 pairs
G	Crimp Contact**	3~4 pairs
H	Cable Terminal	7
I	WiFi Logger	1
J	BAT-COM Terminal	1
K	Grounding Cable	1
L	OT Terminal	1
M	RJ45	2
N	Quick Start Guide	1

* All materials except B are in the Accessory box.

** Standard configuration includes 3 pairs; 4 pairs is optional.

Installation

Installation Environment Requirements

1. Do not install the equipment in a place near flammable, explosive, or corrosive materials.
2. Install the equipment on a surface that is solid enough to bear the inverter weight.
3. Install the equipment in a well-ventilated place to ensure good dissipation. Also, the installation space should be large enough for operations.
4. The equipment with a high ingress protection rating can be installed indoors or outdoors. The temperature and humidity at the installation site should be within the appropriate range.
5. Install the equipment in sheltered areas to provide protection from sunlight, rain, and snow.
6. Install the equipment in a place that is not accessible to children to ensure their safety. High temperature exists when the equipment is working. Do not touch the surface to avoid burning.
7. Install the equipment at a height that is convenient for operation and maintenance, electrical connections, and checking indicators and labels.
8. Install the equipment away from electromagnetic interference.



Installation






Installing the Inverter

Step 1 Put the mounting plate on the wall horizontally and mark positions for drilling holes.

Step 2 Drill holes to a depth of 80mm using the hammer drill. The diameter of the drill bit should be 10mm.


Step 3 Secure the mounting plate using the expansion bolts.

Step 4&5 Tighten the nuts to secure the mounting plate and the inverter.

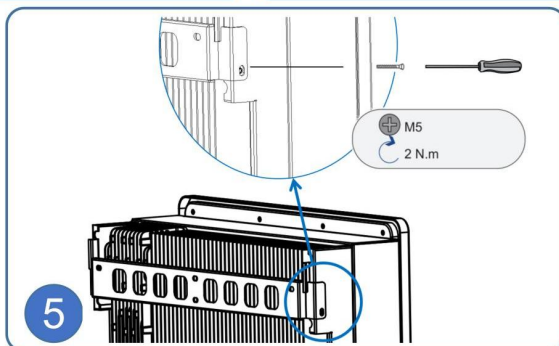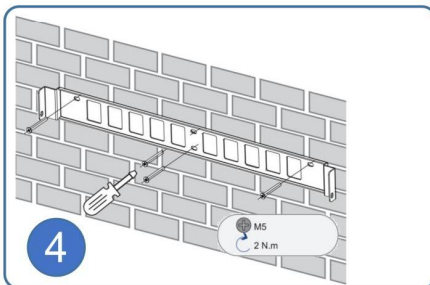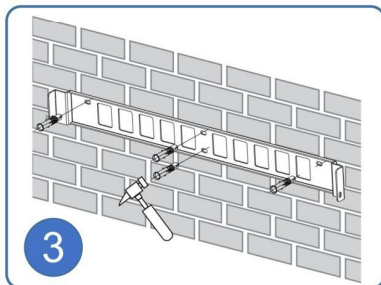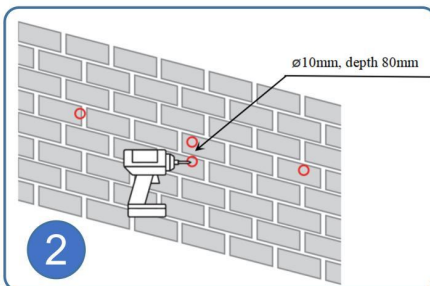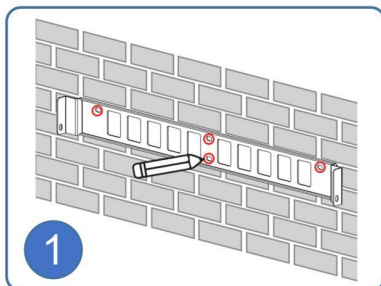


Installation

Ground Cable Connection

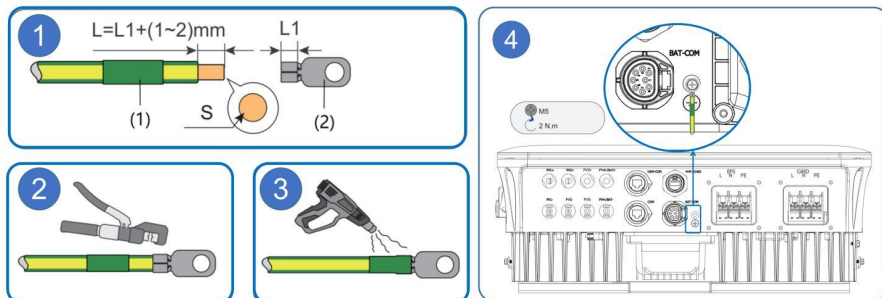

PV&Battery Cable Connection

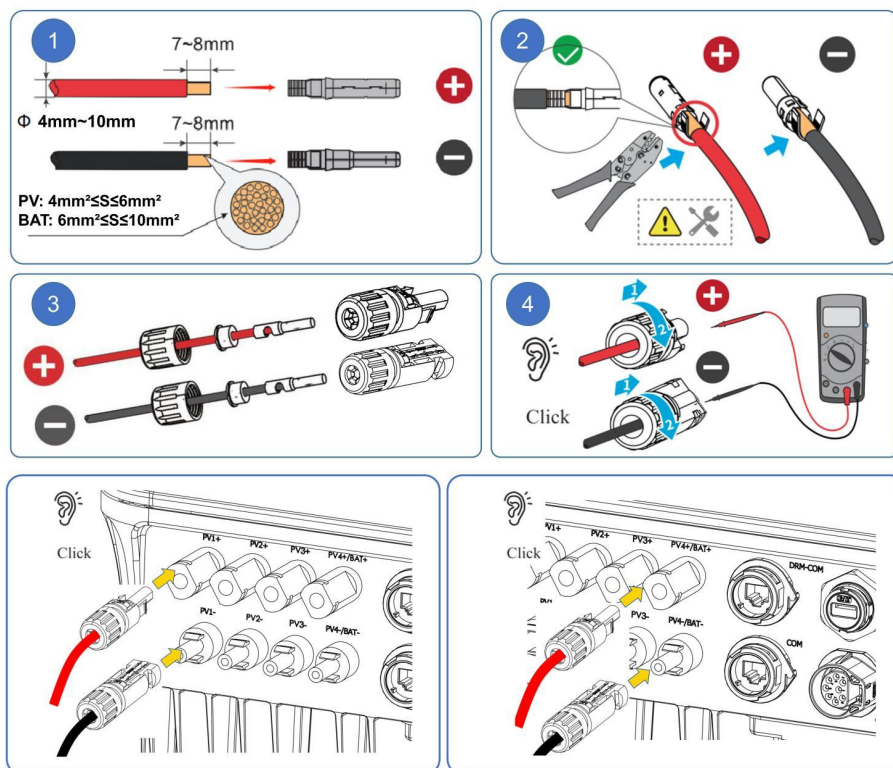

Notice



It should be noted that the PV4+&PV4- is unavailable here, it is only for battery connection. Standard configuration includes PV1 and PV2; PV3 is optional. PV1 is one MPPT, PV2&PV3 share one MPPT.

Installation


COM Connection

1. Use the "BAT-COM terminal" to complete the communication. (standard)


Pin 5/6 is connected correspondingly to the RS485 port of the Electric Meter. Pin 1/2 is connected to the corresponding port of the Battery.

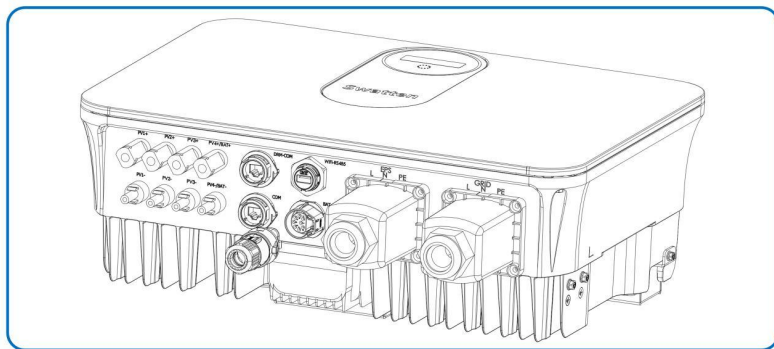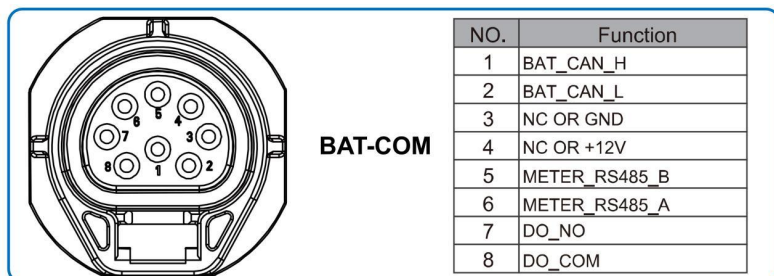


2. Use the "1 to 3 port cable" to complete the communication. (Optional)

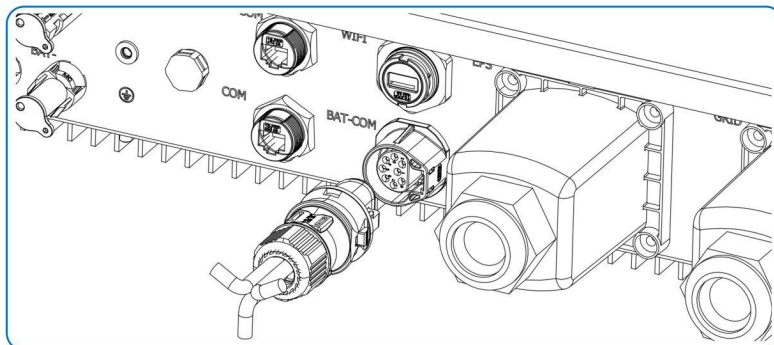


Installation

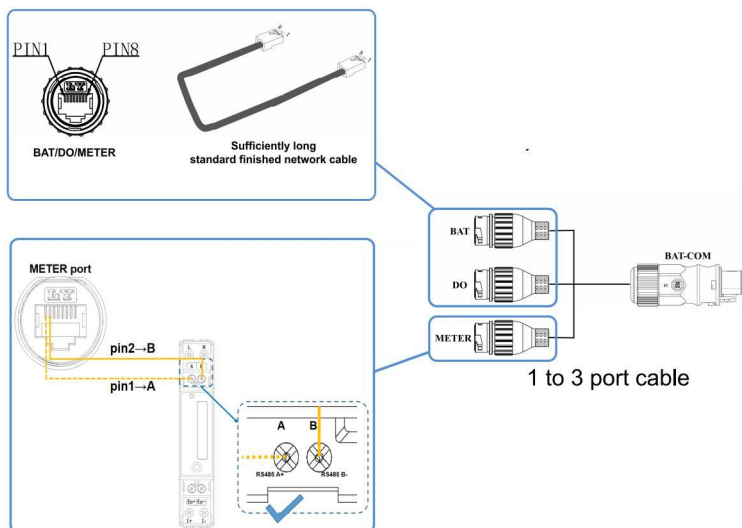

AC Cable Connection

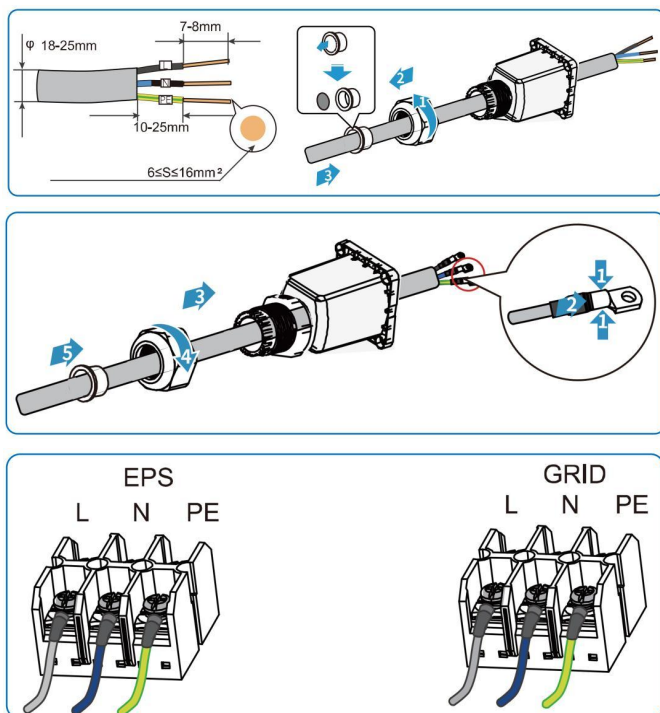

WiFi Logger Connection

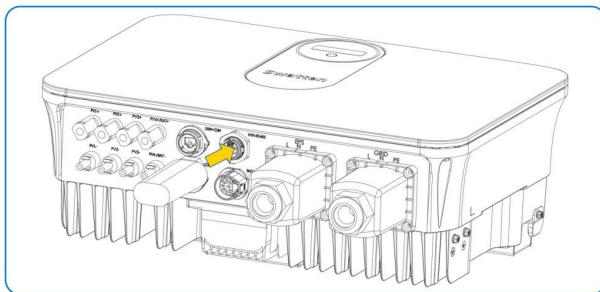


Smart Meter Connection

Wiring must be correct!!!

Step 1: Turn off the PV panel switch, the load switch, the battery switch and other power switches, and ensure that they cannot be reconnected.

Step 2: Connect correct pin1 and pin2 of "1 to 3 cable" to terminal A and terminal B on the Smart Meter.

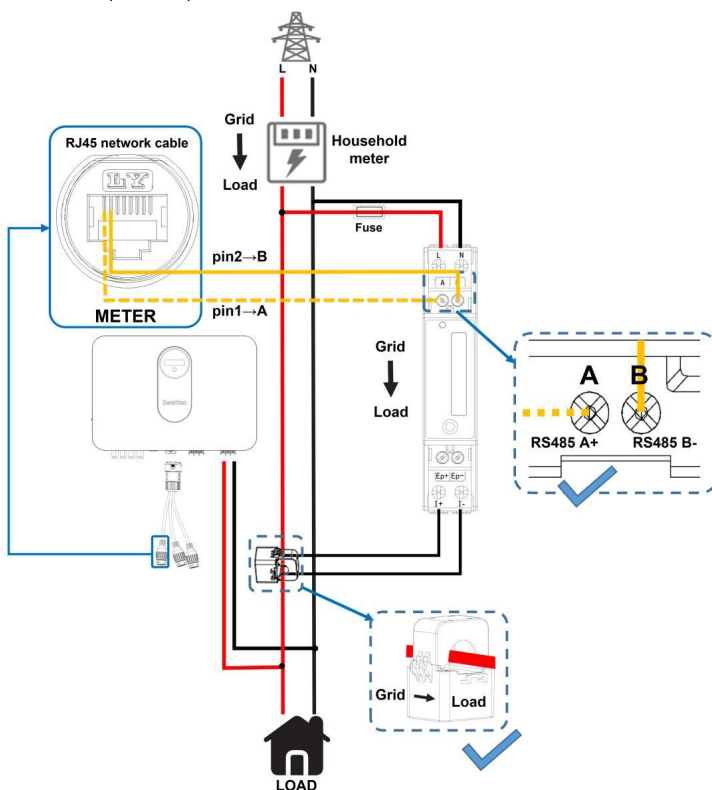

Installation

Step 3: Connect each wire to the terminals on the Smart Meter.


Step 4: After the meter is connected, it is necessary to carefully inspect the CT direction and cable installation. The arrow on the CT **MUST** always point to the **LOAD** side.

After the meter is connected, it is necessary to check the following items:

1. The arrow on the CT should be directed towards the **LOAD** side.
2. Ensure that the clips are perfectly engaged without any deviation. Otherwise, the measurement of current may not be accurate.



3. Carefully check whether the wiring sequence of the Smart Meters and CTs are correct.

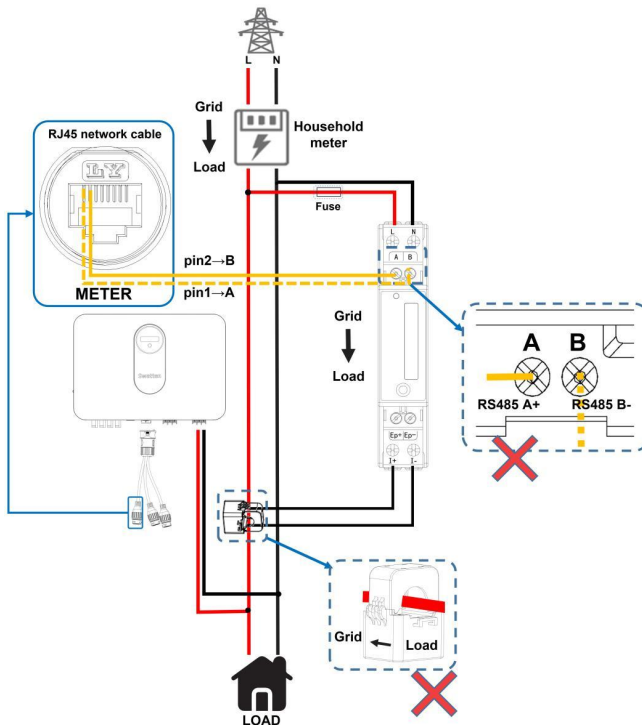

Installation

App

Scanning the QR code for inverter App download and commissioning.






App Download



Commissioning Steps

LED indicator

LED Color	State	Definition
 Green	ON	The inverter is operating normally.
	Flashing	The inverter is at standby or startup state (without on/off-grid operation).
 Red	ON	A system fault has occurred.
 Grey	OFF	Both the AC and DC sides are powered down.

Shanghai Sieyuan Watten Technology Co., Ltd.

Address: No. 3399 Huanning Rd.
Minhang District,
Shanghai 201100
P. R. China
Website: <https://www.swatten.com>



Installation Video



User Manual
Download



www.swatten.com